


DIRECTIONAL GUIDANCE WET-SET (REPLACEABLE) INSTALLATION INSTRUCTIONS


1. Read installation instructions thoroughly before you begin.
2. Make sure that concrete is compliant with ADA guidelines and engineers specifications to ensure that proper tile installation can be achieved.
3. Place Directional Guidance Tile into concrete until the top surface is flush (Fig. 1)
Note: A string line is recommended to maintain a straight installation.

Fig. 1




4. Using a rubber mallet, tap the entire surface of the tile to ensure proper consolidation of concrete around the anchors. (Fig. 2)
Note: Installing tiles after the moisture is gone from the top surface will help keep tiles from floating.

FIG. 2

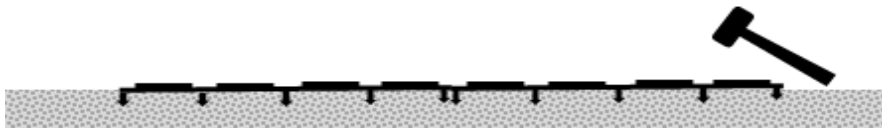

5. Finish concrete to required specifications. *Do not stand or walk on tile until concrete is fully cured.*
6. Once all post installation finishing has been completed, clean any excess concrete slurry that may have consolidated on the top surface.

Important: If cutting is required, new holes need to be drilled and anchors re-installed.

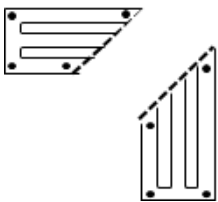

Installation is now complete

[Click here](#) for more information including an installation video tutorial.
Contact us at 888-960-8897 with questions.

